SBS Profibus and Profinet DP Interface User's Guide

with SB-5500 Series Controls

LL-5800 Rev 1.8c (GSD 6.1)



Productivity through Precision™











Limited Use License Agreement

CAREFULLY READ THE FOLLOWING TERMS AND CONDITIONS BEFORE OPENING THE PACKAGE CONTAINING THE PRODUCT AND THE COMPUTER SOFTWARE LICENSED HEREUNDER. CONNECTING POWER TO THE MICROPROCESSOR CONTROL UNIT INDICATES YOUR ACCEPTANCE OF THESE TERMS AND CONDITIONS. IF YOU DO NOT AGREE WITH THE TERMS AND CONDITIONS, PROMPTLY RETURN THE UNIT TO THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT WITHIN FIFTEEN DAYS FROM DATE OF PURCHASE AND YOUR PURCHASE PRICE WILL BE REFUNDED BY THE DEALER. IF THE DEALER FAILS TO REFUND YOUR PURCHASE PRICE, CONTACT ACCRETECH SBS, INC. IMMEDIATELY AT THE FOLLOWING ADDRESS CONCERNING RETURN ARRANGEMENTS.

Accretech SBS, Inc. provides the hardware and computer software program contained in the microprocessor control unit. Accretech SBS, Inc. has a valuable proprietary interest in such software and related documentation ("Software"), and it licenses the use of the Software to you pursuant to the following terms and conditions. You assume responsibility for the selection of the product suited to achieve your intended results and for the installation, use, and results obtained.

License Terms and Conditions

- a. You are granted a nonexclusive, perpetual license to use the Software solely on and in conjunction with the product. You agree that the Software title always remains with Accretech SBS, Inc.
- b. You and your employees and agents agree to protect the confidentiality of the Software. You may not distribute, disclose, or otherwise make the Software available to any third party, except for a transferee who agrees to be bound by these license terms and conditions. In the event of termination or expiration of this license for any reason whatsoever, the obligation of confidentiality shall survive.
- c. You may not disassemble, decode, translate, copy, reproduce, or modify the Software, except only that a copy may be made for archival or back-up purposes as necessary for use with the product.
- d. You agree to maintain all proprietary notices and marks on the Software.
- e. You may transfer this license if also transferring the product, provided the transferee agrees to comply with all terms and conditions of this license. Upon such transfer, your license will terminate, and you agree to destroy all copies of the Software in your possession.

User's Guide and Specifications

for

Decentralized Peripherals (DP) Interface Guide

for the

SBS Profibus and Profinet

For Use with Model SB-5500 Series Control Units

LL-5800

Revision 1.8c (GSD 6.1)

© 2020 Accretech SBS, Inc.

Corporate Offices 2451 NW 28th Avenue Portland, OR 97210 USA

sales@accretechSBS.com Tel: +1 503.595.4270 Fax: +1 503.595.4271 https://accretechsbs.com/

Benefits of Profibus and Profinet

- Increases throughput by saving setup time.
- All-digital electronic design increases operating life and reliability.
- Easy to install and operate.
- Works with existing SBS installations.
- International adaptability and display language.
- Backed by world-class SBS customer service.

Table of Contents

Introduction	1
Profibus	2
Network Cable	2
GSD File	2
Setup and Station Address	2
Settings Without Control's Front Panel	2
Settings with the Front Panel	2
Define Configuration	3
Example Input Screens	5
Examples of Control Points Entry	5
Define Input and Output Bytes and Bits in the Master	8
Device Card Configurations	9
Set Parameters	10
Parameters	12
Definitions of the Parameters	
SBS Error Reporting	23
Error Reporting Options: Diagnosis Field or Data Field	23
Application Notes	24
Profibus Byte and Word Addresses for the Siemens S7 and SB-5500	24
Profibus and LCD Interaction	24
Profibus Master Reporting Errors A and J While the Spindle is Stopped	25
Errors Sent by Diagnosis Messages	25
Profinet	27
Profinet Configuration	27
Install Configuration Software	27
Ethernet Device Setup	29
Set IP Address	
Set SYCON Password	31
Import Device Description	
Add NetLINK	
Search for SYCON IP Address	35
Network Scan	
SYCON Download	
Export GSDML	
Save Project and Disconnect	
Ordering and System Maintenance	41
Ordering Profibus and Profinet	41

Support	.41
Return and Repair Policy	.41

Introduction

This guide provides the information needed to configure and to use the Profibus and Profinet interfaces of the SB-5500. It does not explain how to access the specific data fields once the data is in the Profibus master, Profinet master, or PLC, since this varies between masters.

To configure the Profibus or Profinet, first complete the following steps.

- 1. Connect the SB-5500 to the network cable.
- 2. Load the GSD or GSDML file into the master.
- 3. Enter the SB-5500 device station address.
- 4. Define the configuration of the SB-5500 in the master.
- 5. Define the input and output bytes and bits in the master.
- 6. Set parameters.

Note This guide uses English language setup screens for one specific master as a reference. Your setup screens may vary in layout and language.

Profibus

Network Cable

The network cable is normally a nine-pin D-shell attached to one or two purple cables.

- 1. Plug the nine-pin D-shell into the nine-pin connector on the back of the SB-5500 labeled "Profibus."
- 2. Check the network cable termination. Each nine-pin D-shell connector typically has provisions in it for termination and a means to enable or disable the termination typically, a switch.
- 3. If necessary, adjust the network cable termination.
- 4. Turn on termination for the Profibus device at the furthest end of the cable. That is, if the SB-5500 is added at one end by extending the network cable, enable termination for the new nine-pin D-shell.
- 5. Ensure that all other terminations are turned off. That is, ensure that the previous end nine-pin D-shell termination is disabled.

GSD File

The GSD file contains definitions that the masters require to interact with a piece of equipment. Each piece of equipment will have a unique GSD.

- 1. Download the Profibus GSD file for the SB-5500 from the SBS website at https://accretechsbs.com/.
- 2. Unzip the file. Two files are provided.
 - a. The GSD file is named **SCH_0C7D.GSD**.
 - b. The optional icon file is named **sbs.dib**. It is for masters that have a place for a company logo.
- 3. For more information about loading the GSD into the master, consult the reference manual for the master in use.

Setup and Station Address

The Profibus station address, error reporting, and GSD scan require setup. The settings are hidden when unavailable. For information about these, see "<u>SBS Error Reporting</u>", "<u>Firmware update</u>" and "Network Scan GSD."

Settings Without Control's Front Panel

Use the IVIS program from Accretech SBS, Inc. (refer to the IVIS manual for connection). On the General Settings tab (gray) select the Connection tab (on the left) and click **Change IP** to show the Profibus settings (in red). Make the changes and click **Change IP** to save them.

Settings with the Front Panel

The station address must be a unique address in the network to which the SB-5500 is connected. The address is entered in SB-5500 only during power up.



1. Connect the power and turn on the SB-5500. When the company logo screen appears, immediately press **Setup**.

Note While in Setup mode:

- Press Enter to save the settings on the screen or to proceed to the next Setup screen.
- Press **Cancel** to cancel unsaved settings on the screen or to proceed to the next screen.
- Press Start to cancel unsaved settings, exit Setup mode, and start operation.

CHOOSE SYSTEM LANGUAGE SETTING		ETHERNET SETTINGS	
ENGLISH DEUTSCH ESPAÑOL FRANÇAIS	V START	MAC:00-23-BB-00-0A-03 ■ IP: 0. 0. 0. 0 SNET: 0. 0. 0. 0 GW: 0. 0. 0. 0 WETWRK SCAN GSD: 5	¥ START
ТАСТАНО РУССКИЙ SVENSKA	ENTER	DHCP:ENABLED	ENTER

2. To reach the Profibus Setting screen, press Cancel, Cancel.

Figure 1: Setup Screens

- 3. From the Profibus Setting screen, use the arrows to select the item to edit and press **Enter** to edit the item.
- 4. Use the **Up** and **Down** arrows to change the selection or digit. For a number, use the **Right** arrow to move to the next digit. Press **Cancel** to revert the setting. Press **Enter** to save and go to the next item.
- 5. When finished, press **Cancel** to begin normal controller operations.

Define Configuration

- 1. Inform the Profibus master about the configuration of the specific SB-5500 being connected to the network.
 - a. To define the SB-5500, use the auto-scan device that the Profibus master has, if available. The auto-scan device can locate the SB-5500 and automatically get the station address and device card configuration.
 - b. After using auto-scan, go to step 5.
 - c. Otherwise, enter the station address and device card configuration manually as follows in steps 2 through 4.
- 2. Inform the Profibus master that there is a new SB-5500 connected to the network.
 - a. Consult the reference guide for the master, as this process varies between masters.
 - b. When the master used to develop the SB-5500 Profibus interface presents a list of devices, pick the new device from this list. The list is derived from the GSD files loaded in the "GSD File" section.
- 3. With the SB-5500 defined, enter the station address. Again, consult the reference guide, as this process varies between masters.
- 4. Enter the specific configuration of the device cards within the SB-5500.
 - a. Consult the reference guide, as the method varies between masters. The master should present a list of modules derived from the GSD file.
 - b. Select **Main** as the first module.

c. For each of the four card slots, starting with slot 1, select the appropriate module type as the next module. **Empty** must be selected for an unused slot. Modules must be selected for all four slots. If the controller has only three slots, **Empty** must be selected for slot 4.

Table 1: List of Possible Modules in SB-5500

For many cards there are multiple choices of modules. Changing to a newer module will give more features but will require more bytes and bits to be defined in the master. See "<u>Define Input and Output</u> Bytes and Bits in the Master."

Card modules introduced at GSD 1 or 2 will report errors as Diagnosis. To report the errors as Data, select the "wo Diag" version of the module. Newer card modules only report errors as Data.

Module Name Octets out/in	GSD version at introduction – Description; ">" means "go to"
Main 1/1	1.0 - Control motherboard.
Mechanical Balancer 1/8	1.0 - Card for cabled mechanical balancers; errors > diagnosis field.
Mechanical Balancer wo Diag 1/11	3.0 - Card for cabled mechanical balancers; errors > data field.
Mechanical Balancer w Jobs 2/11	6.0 - Card for cabled mechanical balancers; errors > data field with jobs.
Non-Contact Balancer 1/8	1.0 - Card for non-contact mechanical balancers; errors > diagnosis field.
Non-Contact Balancer wo Diag 1/11	3.0 - Card for non-contact mechanical balancers; errors > data field.
Non-Contact Balancer w Jobs 2/11	6.0 - Card for non-contact mechanical balancers; errors > data field with jobs.
Manual Balancer 1/7	1.0 - Card for manual balance; errors > diagnosis field.
Manual Balancer wo Diag 1/10	3.0 - Card for manual balance; errors > data field.
Manual Balancer w Jobs 1/11	6.0 - Card for manual balance; errors > data field with jobs.
Hydrokompenser Balancer 2/8	1.0 - Card for Hydrokompenser balancer; errors > diagnosis field.
Hydrokompenser Balancer wo Diag 2/11	3.0 - Card for Hydrokompenser balancer; errors > data field.
AEMS 2/5	1.0 - Card for AE monitoring; errors > diagnosis field.
AEMS wo Diag 2/7	3.0 - Card for AE monitoring; errors > data field.
AEMS Zero 3/9	5.0 - Card for AE monitoring; errors > data field; set Zero (0) field.
EXACTDRESS 2/5	2.0 - Card for ExactDress monitoring; errors > diagnosis field.
EXACTDRESS wo Diag 2/7	3.0 - Card for ExactDress monitoring; errors > data field.
EXACTCONTROL 8/10	4.0 -Card for ExactControl process monitoring; errors > data field.
EXACTCONTROL w Ack 8/20	5.1 - Card for ExactControl process monitoring; errors > data field; job- executing status; continuous AE sensor data.
SB-5562 AE Control 8/20	6.1 - Card for Studer process monitoring; errors > data field; job-executing status; continuous AE sensor data.
Empty 0/0	1.0 - Empty card slot; no card installed.

Example Input Screens

Following are example English input screens for the master.

Slot	Idx	Module	Symbol	Type	I Ad	dr.	I Le	en.	Type	0	Addr.	O Len.	
0	1	Main	Module1	IB	0		1		QB	0		1	
1	1	Mechanic	Module2	IB	1		8		QB	1		1	
2	1	Empty	Module3	20.00									
3	1	Empty	Module4	1	1								
4	1	Empty	Module5		12	5							
				1									
			2										

Example 1: Fully defined SB-5500 with one device card installed.

Slot	Idx	Module	Symbol	Type	I Addr.	I Len.	Type	O Addr.	O Len.
0	1	Main	Module1	IB	0	1	QB	0	1
1	1	Empty	Module2						
2	1	Non-Cont	Module3	IB	1	8	QB	1	1
3	1	Empty	Module4				1.14		
4	1	Mechanic	Module5	IB	9	8	QB	2	1
		1							

Example 2: Fully defined SB-5500 with two device cards.

5. Enter the specific meanings of the various bytes and bits for the I/O control points.

Note The GSD file does not contain the bit/byte meanings. They must be entered manually.

- a. Consult the reference guide, as the process varies between Profibus masters.
- b. From the input screen, select the byte offset or the bit offset.
- c. Enter the logic name.
- d. Enter the size of the field.
- e. Enter the byte swapping for 16-bit or 32-bit sized words.

Examples of Control Points Entry

The following examples show the various inputs and outputs for module 1 and module 3 from the previous examples, including both 16-bit words and bit definitions.

Tag name	Tag description		0
ails		Set default	Ca
Tag name	Tag description		Outpu
ils		Set default	
Tag name	Tag description		
		Set default	
Tag name	Tag description		
master fni		Set default	
Indecorripi			
	Tag name Tag name Tag name Tag name I	Tag name Tag description Image name Tag description Tag name Tag description Tag name Tag description Tag name Tag description Tag name Tag description	Tag name Tag description Its Its Its Its Its Its Its Its Its Its Its Its Its Its

Example 3: Input for Main (Module 1)

Edit Output Tags,	Module 'Module:	1'			×
Array of Byte	Long 1 Details	Tag name	Tag description	Set default	OK Cancel
	Word 1 Details	Tag name	Tag description	Set default	Input Tags
	Byte 1	Tag name	Tag description	Set default	
	Bit	Tag name [fpi	Tag description	Set default	
	2 3				

Example 4: Output for Main (Module 1)

t Input Tags, M	lodule 'Module3'				
Array of Byte #000 #001	Long 1 Details	Tag name	Tag description	Set default	OK Cancel
#002 #003 #004 #005	Word 1 Details	Tag name vib amp	Tag description	Set default	Output Tag
#007	Byte 1	Tag name	Tag description	Set default	

Example 5: Input for Module 3, Array 000

Edit Input Tags, N	1odule 'Module3'				x
Array of Byte	Long 1 Details	Tag name	Tag description	Set default	OK Cancel
#002 #003 #004 #005 #005	Word 1 Details	Tag name vib phase	Tag description	Set default	Output Tags
#007	Byte	Tag name	Tag description	Set default	

Example 6: Input for Module 3, Array 002

Input Tags, M	lodule Module3				
urray of Byte	Long	Tag name	Tag description		OK
#000 #001	1 Details			Set default	Cancel
\$002 \$002	Word	-			_
1003 1004 1005	1 Details	l ag name rpm	Tag description	Set default	Output Tags
#006 #007	Byte	Tag name	Tag description		
	1			Set default	

Example 7: Input for Module 3, Array 004

Edit Input Tags, Me	odule 'Module3'			×
Array of Byte #000 #001	Long 1 Details	Tag name	Tag description Set default	OK Cancel
#002 #003 #004 #005 #006	Word 1 Details	Tag name	Tag description Set default	Output Tags
#007	Byte 1	Tag name	Tag description Set default	
	Bit	Tag name	Tag description	
	2	Bal_out_tolerance Bal_out_tolerance2 Error_clear		
	4 5	FPI Bal_in_progress		
	6 7 8	Failed_bal Dual_bal		
	0	[Duai_bai2		

Example 8: Input for Module 3, Array 006

Edit Input Tags, M	odule 'Module3'				x
Array of Byte #000 #001	Long 1 Details	Tag name	Tag description	Set default	OK Cancel
#002 #003 #004 #005 #006	1 Details	Tag name	Tag description	Set default	Output Tags
#007	Byte 1	Tag name	Tag description	Set default	
	_ Bit	Tagname	Tag description		
	1	Dual_bal_mode		Set default	

Example 9: Input for Module 3, Array 007

H000	Long	Tag name	Tag description		OK
	Details	<u> </u>		Set default	Cancel
	Word	Tag name	Lag description		Input Tar
	1 Details			Set default	inport og
	Byte	Taginama	The description		
	1			Set default	
	Bit	Tag name	Tag description		
	1	FPI_out		Set default	
	2	Clear_error			
	3	Start_bal			
	4	Stop_bal			
	5	Set_single_mode			
	6	Set_dual_mode			

Example 10: Output for Module 3

Define Input and Output Bytes and Bits in the Master

This section explains how SB-5500 handles input and output control points with the many combinations of device cards that SB-5500 supports. It assumes a general knowledge of Profibus implementation. It does not cover the structure of the parameter list or diagnosis (error) list, since that is well documented by the GSD file. Output is defined as data from the Profibus master to SB-5500. Input is defined as data from SB-5500 to the Profibus master.

The SB-5500 has a few control points. Most of these control points are single-bit, yes/no type functions. Others, such as job number, require 8 bits (octet). Still others, such as RPM indication, require 16 bits (two octets). The various bit type control points are gathered together to form octets. To determine the specific location within an octet, see "Parameters."

The device gathers all the octets for a specific device card into a contiguous group of octets. The system specifies the octet offset from the beginning of the group of octets. This holds true for input or output control points. For information about where the octet holding a specific control point is found in a group of octets, see "Parameters."

The SB-5500 Profibus interface is a combined interface for a few Profibus modules. The controller Main is the base module supporting the separately installed device cards in device slots 1-4. Each module has its own number of input and output data octets.

The system collects each contiguous group of octets from each module into one large data field whenever the Profibus master requests input from the SB-5500. It sends all input data octets, even if the same data was sent previously. When the Profibus master wants to send data to one or more of the modules in an SB-5500, it will send all output data to all modules, even if the output data for a module has not changed. It sends all the various output data octets to the SB-5500 as one data field. Then, the SB-5500 separates this data field into a contiguous group of octets for each module. Finally, it sends each module a contiguous group of octets.

The SB-5500 merges all input data (input to Profibus master) and separates all output data (output from Profibus master) for each of the installed modules to or from the single data field, as needed. It does this based on the type of device card installed in each numbered device slot.

Data octets to and from Main are always first in the data field, followed by the data octets for Slot1, followed by the data octets for Slot2, followed by the data octets for Slot3, and followed by the data octets for Slot4. If one or more of the slots are empty, the data octets of the next installed slot will immediately follow the preceding octets. By determining the number of data octets each device card uses and the slot the device card is in, it determines the offset into the large data field. Some examples of SB-5500 with installed device cards follow.

Device Slot Number	Installed Module	Number of Octets Sent	Octet Positions in Data Field
Main	Main	1	0
1	Manual Balancer	1	1
2	Hydro Balancer	2	2, 3
3	(Empty)	-	-
4	AEMS	3	4-6

Table 3: Input from SB-5500

Device Slot Number	Installed Module	Number of Octets Sent	Octet Positions in Data Field

Main	Main	1	0
1	Hydro Balancer	11	1-11
2	(Empty)	-	-
3	Mechanical Balancer	11	12-22
4	Manual Balancer	11	23-33

Device Card Configurations

The following examples show how the various device cards are put together.

The next example is a general-purpose debugging screen that shows all the raw input bytes and output bytes from the SB-5500 in Example 2.

Note The example shows more data than is in the actual data transfers.

hex		1	2	3	4	5	6	7	8	9	Т	
0	02	00	27	09	B3	00	00	00	00	00	71	DEC/HE
1	08	09	C9	0A	3C	40	00	00	00	00		
2	00	00	00	00	00	00	00	00	00	00		
3	00	00								č		
4												
5			1 N									
											- 88	
6												
6 7												
6 7 Jutput (data 0	1	2	3	4	5	6	7	8	9		
6 7)utput (dec 0	data 0	10	2 0	3	4	5	6	7	8	9	-	
6 7)utput (dec 0 1	data 0 0 0	1 0 0	2 0	3 0	4	50000	<u>6</u> 0	7 0	8000	9		Update
6 7 Jutput (dec 0 1 2	Jata 0 0 0 0	1 0 0 0	2 0	<u>3</u> 0 0	4 0	5 0 0	6 0 0	7000000	8 0 0	9		
6 7 Jutput (dec 0 1 2 3	data 0 0 0 0 0	1 0 0 0	2 0 0	<u>3</u> 0 0	4 0 0	5 0 0	<u>6</u> 0 0	70000	8 0 0	9		
6 7 Jutput (dec 0 1 2 3 4	data 0 0 0 0 0	1 0 0 0	2 0 0	3 0 0	4 0 0	5 0 0	6 0 0	70000	8 0	9		
6 7 Jutput (dec 0 1 2 3 4 5	data 0 0 0 0 0	1 0 0 0	2 0 0 0	<u>3</u> 0 0	4 0	5 0 0	6 0 0	7 0 0	8 0	9		

Example 11: Debugging screen

The following example shows the Main (module 1) input and output fully decoded. The offset is the actual byte offset from the start of the large data block described in Example 11. The large I at the beginning of each line denotes the inputs. The large \mathbf{O} at the beginning of each line denotes the outputs.

Tag Name	Туре	Offset	Value	
I master fpi	Bit	0.0 Master Assignment	Off Good, non specific	
I fp installed	Bit	0.1 Master Assignment	On Good, non specific	
0 fpi	Bit	0.0 Master Assignment	Off Good, non specific	
100000				

Example 12: Decoded Main (Module 1) Input and Output

The following example shows module 3 input and output fully decoded. The offset is the actual byte offset from the start of the large data block describe in Example 11. The individual bits are defined as a byte (output) and a word (input), so the system will process them simultaneously.

Tag Name	Туре	Offset	Value
l vib amp	16-bit unsigned integer (word)	1 Master Assignment	67 VT_UI2 Good, non specific
l vib phase	16-bit unsigned integer (word)	3 Master Assignment	752 VT_UI2 Good, non specific
l rpm	16-bit unsigned integer (word)	5 Master Assignment	0 VT_UI2 Good, non specific
l status	16-bit unsigned integer (word)	7 Master Assignment	1 VT_UI2 Good, non specific
0 Output	8-bit unsigned integer (byte)	1 Master Assignment	0 VT_UI1 Good, non specific
	(2 Byte)		

Example 13: Decoded Module 3 Input and Output

The following example shows module 5 input and output fully decoded. The offset is the actual byte offset from the start of the large data block described in Example 11.

Tag Name	Туре	Offset	Value
vibration amplitude	16-bit unsigned integer (word)	9 Master Assignment	10 VT_UI2 Good, non specific
l vibration phase	16-bit unsigned integer (word)	11 Master Assignment	2289 VT_UI2 Good, non specific
l rpm	16-bit unsigned integer (word)	13 Master Assignment	2620 VT_UI2 Good, non specific
bal out of tolerance	Bit	15.0 Master Assignment	Off Good, non specific
bal out of tolerance 2	Bit	15.1 Master Assignment	Off Good, non specific
error needs to be cleared	Bit	15.2 Master Assignment	Off Good, non specific
front panel inhibit	Bit	15.3 Master Assignment	Off Good, non specific
balance in progress	Bit	15.4 Master Assignment	Off Good, non specific
failed balance	Bit	15.5 Master Assignment	Off Good, non specific
dual balancing type 0	Bit	15.6 Master Assignment	On Good, non specific
dual balancing type 1	Bit	15.7 Master Assignment	Off Good, non specific
dual balancing mode	Bit	16.0 Master Assignment	Off Good, non specific
0 Output	8-bit unsigned integer (byte)	2 Master Assignment	0 VT_UI1 Good, non specific
0 fpi	Bit	2.0 Master Assignment	Off Good, non specific
0 dear error	Bit	2.1 Master Assignment	Off Good, non specific
0 start bal	Bit	2.2 Master Assignment	Off Good, non specific
O stop bal	Bit	2.3 Master Assignment	Off Good, non specific
0 set single mode	Bit	2.4 Master Assignment	Off Good, non specific
O set dual mode	Bit	2.5 Master Assignment	Off Good, non specific

Example 14: Decoded Module 5 Input and Output

For a complete table of all SB-5500 Profibus parameters, outputs, inputs, and diagnoses (errors), see "Table 4: Profibus Parameters List."

Set Parameters

Note Parameter are included for backward compatibility and are not included in GSD levels 3 and higher. Parameters are normally maintained in EEPROM and do not need to be preset by Profibus.

The GSD file supplies the setup parameters. The master in the following example presents a list from the GSD file of all the possible parameters for the current SB-5500 controller and device card combination.

- 1. For information about entering settings, consult the reference guide for the master, as this varies between masters.
- 2. Select a parameter.
- 3. From the list, select an option.
- 4. Click **OK**.
- 5. To enable the change to take effect in SB-5500, change the **Set** value to **Yes**. For example, Set Language value = Yes. This overrides the settings made from the **Main** menu available on the SB-5500 front panel or display unit.

- 6. To prevent a setting override, leave the default Set value in the GSD set to No.
- 7. Click **OK**. The system sends the parameters to the SB-5500 whenever an SB-5500 connects, an SB-5500 reconnects, or parameters change.

The following figure shows setting the language selection.

Param Descr	eter Data iption Common Paramete	er Data	OK	
Byte 3	Description Language	Value English	Cancel	
3	Set Language	Yes	Language	×
			English German Spanish French Italian Russian Swedish Polish Chinese	OK Cancel

Figure 2: Setting the Language

The following figure shows setting the tolerance for balancing.

Param	eter Data			×	
Descri	ption Index Parameter Data		OK	1	
Byte	Description	Value	Cancel	1	
0	Critical RPM	500			
2	Limit xx.xx	100	Tolerance x	ww	×
4	Tolerance xx.xx	100			
6	Critical xx.xx	100	Data type	Unsigned16	ОК
8	Set Critical RPM	No	Offset		
8	Set Limit	No	Minivalue	() (dec)	Cancel
8	Set Tolerance	No	Min valae		
8	Set Critical Level	No	Max value	TUUUU (dec)	Hex
8	Vibration Display units	um	Value	100	dec
8	Vibration Display Resolution	0.1	Value	Juss	dec
9	Set Display Units	No		-	
9	Set Display Res	No			
9	Balance Speed	Normal	-		

Figure 3: Setting the Tolerance

The following figure shows the other parameters that are available for balancing. Use the scrollbar to see these additional parameters.

	iption index rataliteter bata			UK
Byte	Description	Value		Cancel
8	Set Critical Level	No		
B	Vibration Display units	um		
B	Vibration Display Resolution	0.1		Parameter Data
9	Set Display Units	No		- arameter bratt
9	Set Display Res	No		Common
9	Balance Speed	Normal		
9	CNC Bot mode	Inactive/SB-2500 mode		Module
9	Dual Rpm Extern	This Slot		
9	Set Balance Speed	No		
9	Set CNC BOT Mode	No		
10	Set Dual RPM Extern	No		

Figure 4: Additional Balancing Parameters

Parameters

The following table lists the SB-5500 Profibus parameters, outputs, inputs, and diagnoses (errors). Mechanical and non-contact balancers have identical Profibus interfaces, so they are grouped together. The octet position shown is the position offset for each individual module, starting with the first octet for that module in position 0. For example, the input from SB-5500 for mechanical and non-contact balancers show a total of eight octets (+0 to +7) with the first two octets for that module describing the vibration amplitude, the next two octets describing the vibration phase, etc.

				Posi	tion			Posit	ion	
Module	Parameter	Outputs to SB-5500	Total Bits	Octet ¹	Bit	Inputs from SB-5500	Total Bits	Octet ¹	Bit	Diagnosis
	Language	Front Panel Inhibit	1	0	0	Front Panel Inhibited	1	0	0	
	Set Language (Y/N) ²	Not used	3	0	1-3	Front Panel Installed	1	0	1	
<u> </u>						Not used	2	0	2-3	
Ma		Slot 1 error disable ³	1	0	4	Slot 1 error disabled ³	1	0	4	
		Slot 2 error disable ³	1	0	5	Slot 2 error disabled ³	1	0	5	
		Slot 3 error disable ³	1	0	6	Slot 3 error disabled ³	1	0	6	
		Slot 4 error disable ³	1	0	7	Slot 4 error disabled ³	1	0	7	

Table 4: Profibus Parameters Li	st
---------------------------------	----

- ² The Set Parameters control update of each corresponding parameter value.
- Set parameter=1 will force the corresponding parameter to be updated.
- Set parameter=0 will leave the corresponding value unchanged from its current stored value.
- ³ Available in 5510 firmware version 0.49 and later.

¹ The octet position is this value added to the total number of octets used by the Main card plus all installed cards up to this card's slot number in the SB5500.

				Posi	tion				Posit	ion	
Module	Parameter	Outputs to SB-5500	Total Bits	Octet ¹	Bit	Inputs from SB-5500		Total Bits	Octet ¹	Bit	Diagnosis
	Critical RPM	Front Panel Inhibit	1	+0	0	Vibration amplitude	H	8	0	0-7	-
						(0.01 microns)	L	8 0	+1	0-7	-
	Limit xx.xx	Clear the error	1	+0	1	(0.1 degree)	n L	8	+2	0-7	1
		Start Balance	1	+0	2	RPM	H	8	+4	0-7	
		Start Dalarice	'		_		L	8	+5	0-7	-
	Critical xx.xx	Stop Balance	1	+0	3	Balance Out of Tolerar	ıce	1	+6	0	
	Set Critical RPM (Y/N) ²	Set Single mode	1	+0	4	Balance Out of Tolerar 2	nce	1	+6	1	
_ dd	Set Limit (Y/N) ²	Set Dual mode	1	+0	5	Error needs to be clear	red	1	+6	2]
card 32) a	Set Tolerance (Y/N) ²	Move weights to home position	1	+0	6	Front Panel Inhibited		1	+6	3	
5512) 3B-55	Set Critical Level (Y/N) ²	Force Idle mode	1	+0	7	Balance In Progress		1	+6	4	
(SB- cer (S	Vib. Display Units	Job number ⁴	4	+1	0-3	Failed Balance/ System Inoperative		1	+6	5	
ncer alano	Vib. Display Resolution					Dual Balancing type		2	+6	6,7	
Bala Ict B	Set Display Units (Y/N) ²					Dual Balancing mode		1	+7	0	
lech conta	Set Display Res. (Y/N) ²					Weights at home position		1	+7	1	
on-O	Balance Speed (1-3)					Not Idle mode		1	+7	2	
Z	CNC BOT Mode					Job number ⁴		4	+7	3-6	
1	Dual RPM Extern.					Errors A-H ⁵		8	+8	0-7	1
	Set Balance Speed (Y/N) ²					Errors I-P ⁵		8	+9	0-7	
	Set CNC BOT Mode (Y/N) ²					Errors Q-X ⁵		8	+10	0-7]
	Set Dual RPM Extern. (Y/N) ²										

⁴ For balancer version 0.34 and later, and for GSD version 6.0 and later.

⁵ For GSD version 3.0 and later, when the Without Diagnosis (**wo diag**) module version is in use, SB-5500 errors are not reported in the diagnosis field. Instead the data packet is expanded and SBS errors are reported using these additional data fields. (See "<u>SBS Error Reporting</u>.") Errors codes Q-X are reserved for future use.

				Posit	ion				Posit	ion		
Module	Parameter	Outputs to SB-5500	Total Bits	Octet ¹	Bit	Inputs from SB-5500		Total Bits	Octet ¹	Bit	Diagnosis	
	Critical RPM	Front Panel Inhibit	1	+0	0	Vibration amplitude	H	8	0	0-7		
	Limit xx.xx	Clear the error	1	+0	1	Vibration phase (0.1 degree)	H	8	+1 +2 +3	0-7		
	Tolerance xx.xx	Start Balance	1	+0	2	RPM	H	8	+4	0-7		
	Critical xx.xx	Stop Balance	1	+0	3	Balance Out of Tolera	nce	1	+6	0		
	Set Critical RPM	Set Single mode	1	+0	4	Balance Out of Tolera	nce	1	+6	1		
	Set Limit (Y/N) ²	Set Dual mode	1	+0	5	Error needs to be clea	ared	1	+6	2		
18)	Set Tolerance	Balance direction	2	+0	6,7	Front Panel Inhibited		1	+6	3		
3B-55	Set Critical Level (Y/N) ²	Set Balance direction ²	1	+1	0	Balance In Progress		1	+6	4		
cer (S	Vib Display Units	Force Idle mode	1	+1	1	Failed Balance/ System Inoperative		1	+6	5		
alanc	Vib Display Resolution	Job number ⁴	4	+1	2-5	Dual Balancing type		2	+6	6,7	A-P	
<u>8</u> 2	Set Display Units (Y/N) ²					Dual Balancing mode		1	+7	0		
Hyd	Set Display Res. (Y/N) ²					Balancing direction		2	+7	1,2		
	Balance Speed (1-3)					Not Idle mode		1	+7	3		
	CNC BOT Mode					Job number ⁴		4	+7	4-7	· ·	
	Dual RPM Extern.					Errors A-H ⁵		8	+8	0-7		
	Set Balance Speed (Y/N) ²					Errors I-P ⁵		8	+9	0-7		
	Set CNC BOT Mode (Y/N) ²					Errors Q-X ⁵		8	+10	0-7		
	Set Dual RPM Extern. (Y/N) ²											
		1					ы	•	0	0.7		
	Critical RPM	Front Panel Inhibit	1	+0	0	(0.01 microns)	n L	0 8	+1	0-7		
	Limit xx.xx	Clear the error	1	+0	1	Vibration phase (0.1 degree)	H	8	+2	0-7 0-7		
-		Force Idle mode	1	+0	2	RPM	H	8	+4	0-7		
44				10	-		L	8	+5	0-7		
3-24	Critical xx.xx	Job number *	4	+0	3-6	Balance Out of Tolera	nce	1	+6	0		
43/SE	$(Y/N)^2$					2		1	+6	1		
-22	Set Limit (Y/N)					Error needs to be clea	ared	1	+6	2		
(SB	$(Y/N)^2$					Front Panel Inhibited		1	+6	3	A-P	
ncer	Set Critical Level (Y/N) ²					Balance In Progress		1	+6	4		
3alar	Vib. Display Units					Failed Balance/ System Inoperative		1	+6	5		
nual	Vib. Display Resolution					Not Idle mode		1	+6	6		
Mai	Set Display Units (Y/N) ²					Errors A-H ⁵		8	+7	0-7		
	Set Display Res. (Y/N) ²					Errors I-P ⁵		8	+8	0-7		
						Errors Q-X ⁵		8	+9	0-7		
						Job number ⁴		4	+10	0-3		

				Posi	tion			Posi	tion	
Module	Parameter	Outputs to SB-5500	Total Bits	Octet ¹	Bit	Inputs from SB-5500	Total Bits	Octet ¹	Bit	Diagnosis
		.lob number	8	+0	0-7	Pressure level H	8	0	0-7	
					• •	xxx.xx L	8	+1	0-7	-
		Front Panel Inhibit	1	+1	0	Job number	7	+2	0-6	-
		Clear the error	1	+1	1	Learn Saved ⁶	1	+2	7	-
		Reset Crash Latch	1	+1	2	Sensor number	3	+3	0-2	-
		M1	1	+1	3	Error needs to be cleared	1	+3	3	
6		M2	1	+1	4	M1	1	+3	4	
522-(Start Continuous/ Start Learn	1	+1	5	M2	1	+3	5	
P B B B B B B B B B B B B B B B B B B B		Stop/ Cancel Learn	1	+1	6	Gap	1	+3	6	
522/5		Set Zero Offset/ Next Learn	1	+1	7	Limit 1	1	+3	7	
B-51		Clear Zero Offset/ Save Learn	1	+2	0	Limit 2	1	+4	0	A-G
S)		Force Idle mode	1	+2	1	Crash	1	+4	1]
MS N		Learn Mode	1	+2	2	Cycle running	1	+4	2]
		Enable Learn Saved ⁶	1	+2	3	Front Panel Inhibited	1	+4	3	1
						Not Idle mode ⁷	1	+4	4	1
						Fluid sensor ⁷	1	+4	5	1
						Job32 mode ⁷	1	+4	6	1
						Learn Active ⁷	1	+4	7	1
						Errors A-H ⁵	8	+5	0-7	1
						Errors I-P 5	8	+6	0-7	1
						Zana Officiational H	8	+7	0-7	1
						Zero Offset value	8	+8	0-7	
			1				0	0	0.7	1
		Dataset select	8	+0	0-7	Pressure level xxx.xx	8	+1	0-7	-
		Front Panel Inhibit	1	+1	0	Dataset #	8	+2	0-7	1
		Clear the error	1	+1	1	Sensor #	3	+3	0-2	1
53		Reset crash latch	1	+1	2	Error needs to be cleared	1	+3	3	1
-26		Not used	1	+1	3	Process running	1	+3	4	1
SB		Data Teach	1	+1	4	Data Teach	1	+3	5	1
s s		Start Continuous	1	+1	5	Gap	1	+3	6	Δ-Ι
es		Stop	1	+1	6	Min.	1	+3	7	
ģ		Start-Stop Process	1	+1	7	Max.	1	+4	0	1
ac						Crash	1	+4	1	1
i ŭ						Cycle running	1	+4	2	1
]						Front Panel Inhibited	1	+4	3]
						Errors A-H ⁵	8	+5	0-7	
						Errors I-P 5	8	+6	0-7]

⁶ Learn Saved, Enable Learn Saved: AEMS GSD 5.0 and version 0.41 and later.

⁷ AEMS GSD 5.0 and version 0.40 or later. ExactControl GSD 6.0 and version 0.29 or later. Studer AE Control GSD 6.1 version 0.29 or later.

				Posit	ion				Posit	ion	
Module	Parameter	Outputs to SB-5500	Total Bits	Octet ¹	Bit	Inputs from SB-5500	To Bi	otal its	Octet ¹	Bit	Diagnosis
		Channel 1: Job Select	8	+0	0-7	Channel 1: Digital Outputs 1-8	1	x8	+0	0-7	
		Channel 1: Start-Stop/ Start Learn/ Capture Learn	1	+1	0	Channel 1: Digital Outputs 9-14	1	x6	+1	0-5	
		Channel 1: Teach/ Cancel Learn	1	+1	1	Channel 1: Teach ⁸		1	+1	6	
		Next Learn	1	+1	2	Channel 1: Infeed Enal	ble	1	+1	7	
		Save Learn	1	+1	3	Channel 2: Digital Outputs 1-8	1	x8	+2	0-7	
		Learn Mode	1	+1	4	Channel 2: Digital Outputs 9-14	1	x6	+3	0-5	
		Channel 2: Job Select	8	+2	0-7	Channel 2: Teach ⁸		1	+3	6	
		Channel 2: Start-Stop	1	+3	0	Channel 2: Infeed Enal	ble	1	+3	7	
		Channel 2: Teach	1	+3	1	Channel 3: Digital Outputs 1-8	1	x8	+4	0-7	
		Channel 3: Job Select	8	+4	0-7	Channel 3: Digital Outputs 9-14	1	x6	+5	0-5	
		Channel 3: Start-Stop	1	+5	0	Channel 3: Teach ⁸		1	+5	6	
		Channel 3: Teach	1	+5	1	Channel 3: Infeed Enal	ble	1	+5	7	
		Channel 4: Job Select	8	+6	0-7	Channel 4: Digital Outputs 1-8	1	x 8	+6	0-7	
0-8)		Channel 4: Start-Stop	1	+7	0	Channel 4: Digital Outputs 9-14	1	x6	+7	0-5	
556		Channel 4: Teach	1	+7	1	Channel 4: Teach ⁸		1	+7	6	
27 F						Channel 4: Infeed Enal	ble	1	+7	7	
0/SE						Errors A-H		8	+8	0-7	
0						Errors I-P		8	+9	0-7	
SB-5 contr						Job ⁹		8	+10	0-7	
						Channel 2: Executing Job ⁹		8	+11	0-7	
Cont						Channel 3: Executing Job ⁹		8	+12	0-7	
Stu						Channel 4: Executing Job ⁹		8	+13	0-7	
ш 						AE Channel 1	н	8	+14	0-7	
						pressure level	1	8	+15	0-7	
						AE Channel 2	- H	8	+16	0-7	
						pressure level	L	8	+17	0-7	
						Channel 1 fluid sensor		1	+18	0	
						Channel 2 fluid sensor		1	+18	1	
						attached ¹⁰		1	+18	2	
						Channel 1. Param		1	+18	2	
						Changed ¹¹		•	10	3	
						Channel 2: Param		1	+18	4	
						Channel 3: Param		1	+18	5	
						Channel 4: Param		1	+18	6	
	L					Changed ¹¹					
						Future assignment ¹⁰		1	+18	7	
						Future assignment ¹⁰		8	+19	0-7	

⁸ For GSD version 5.1 and later, Digital output bit 15 becomes the Teach status bit. A one (1) indicates Teach is active on at least one instance. A zero (0) indicates Teach is inactive.

 $^{^{9}}$ When a job is executing, the job number is placed in the channel's field. When the channel is idle, a zero (0) is placed in the field.

¹⁰ GSD version 5.1 and later. AE Channel 1 is used for AE Sensors 1, 3, 5, and 7. AE Channel 2 is used for AE Sensors 2, 4, 6, and 8.

¹¹ Param Changed: ExactControl GSD 6.0 and version 0.30 and later. Studer AE GSD 6.1 and versions 0.30 and later.

Definitions of the Parameters

Table 5: Outputs to SB-5500

Output Parameter	Definition
Balance Direction (Hydrokompenser)	0,0 = Automatic always 0,1 = Automatic once 1,0 = Same 1,1 = Opposite
Cancel Learn	 1 = Cancel the AE learn cycle. The 0 to 1 transition causes the action. 0 = No operation. The function of this output is valid only when Learn Mode = 1.
Capture Learn	 1 = Capture the background. The 0 to 1 transition causes the action. 0 = No operation. The function of this output is valid only when Learn Mode = 1.
Channel x - Job Select (x = 1-4)	Job number. Valid values are 1 through the maximum as limited by card storage. Job 0 will select the last job displayed for edit.
Channel x – Start-Stop $(x = 1-4)$	 1 = Start Teach or Start Process monitoring of the selected job. The 0 to1 transition causes the actual start. 0 = Stop process monitoring or stop data teach acquisition. The 1 to 0 transition causes the actual stop. The function of this output is valid only when Learn Mode = 0.
Channel x - Teach $(x = 1-4)$	 1 = Start will cause Teach operation. 0 = Start will cause Process monitoring operation. The function of this output is valid only when Learn Mode = 0.
Clear the Error	1 = Clear the current error in slot. The 0 to 1 transition causes the actual clearing. (See input bit "Error Needs to be Cleared.") 0 = No operation
Clear Zero Offset	1 = Clear the zero offset. The 0 to 1 transition causes the action. The function of this output is valid only when Learn Mode = 0. 0 = No operation.
Data Teach	1 = Teach mode active. 0 = Process monitoring mode active.
Dataset Select	Same as job number. Valid values are 1 through 32.
Enable Learn Saved	1 = The input bit "Learn Saved" may become set after a Learn cycle. 0 = Learn Saved bit stays reset.
Force Idle Mode	1 = Force the Idle mode. The 0 to 1 transition causes the actual forcing. 0 = No operation. (See input bit " <u>Not Idle Mode</u> .")
Front Panel Inhibit (Balancer, AEMS, ExactDress)	 1 = Inhibit front panel activity for this slot. 0 = Front panel activity for this slot is not inhibited from this source. Any active Front Panel Inhibit source for a slot inhibits front panel activity. All Front Panel Inhibit sources for a slot must be inactive to allow activity on the panel. This signal is only one of four Front Panel Inhibit sources for any slot.

Output Parameter	Definition
Front Panel Inhibit (Main)	 1 = Inhibit front panel activity on all slots. 0 = Front panel activity is not inhibited from this source. Any active Front Panel Inhibit source for a slot may inhibit front panel activity. All Front Panel Inhibit sources for a slot must be inactive to allow activity on the panel. This signal is only one of four Front Panel Inhibit sources for any slot.
Job # (AEMS)	Values of 1 through 16 represent job numbers and will immediately set the job (1 through 32 in 32 Job mode). Ignores other values.
Job # (Balancer)	Values of 1 through 8 represent job numbers and will immediately set the job. Ignores other values.
Learn Active (AEMS, ExactControl, Studer AE)	1 = learn state active 0 = learn state inactive
M1	1 = Change to M1 mode. The 0 to 1 transition causes the actual change. 0 = No operation.
M2	1 = Change to M2 mode. The 0 to 1 transition causes the actual change. 0 = No operation.
Move Weights to Home Position	1 = Start the cycle that moves the weights to the home position. The 0 to 1 transition starts the cycle. Only valid with Home sensors in a non-contact balancer. 0 = No operation.
Next Learn	 1 = Advance to the next phase of the learn cycle. The 0 to 1 transition causes the action. 0 = No operation. The function of this output is valid only when Learn Mode = 1.
Learn Mode	 1 = Learn Mode. Related outputs only apply to Learn functions: AEMS: Start Learn, Cancel Learn, Next Learn, and Save Learn. ExactControl, Studer AE: Start Learn, Capture Learn, Cancel Learn, Next Learn, and Save Learn. 0 = Normal Operation. Related outputs only apply to Process functions: AEMS – Start Continuous, Stop, Set Zero, and Clear Zero. ExactControl, Studer AE: Start-Stop and Teach.
Reset Crash Latch	1 = Clear the crash latch. The 0 to 1 transition causes the actual reset. 0 = No operation.
Save Learn	1 = Save the results of the learn cycle. The 0 to 1 transition causes the action. 0 = No operation. The function of this output is valid only when Learn Mode = 1. See "Learn Saved".
Set Balance Direction	1 = Turn on balance direction as set in Set Balance Direction Command. The 0 to 1 transition causes the actual direction change. 0 = Turn off balance direction.
Set Dual Mode	1 = Change slot operation to dual balance head operation. The 0 to 1 transition causes the actual change. 0 = No operation.

Output Parameter	Definition
Set Single Mode	 1 = Change slot operation to single balance head operation. The 0 to 1 transition causes the actual change. 0 = No operation.
Set Zero Offset	1 = Set the present level as zero (0). The 0 to 1 transition causes the action. 0 = No operation. The function of this output is valid only when Learn Mode = 0.
Slot x Error Disable (x=1, 2, 3, or 4)	 1 = Prevent any errors from the specified slot from passing to the bus master. Sends a Diagnosis Clear message to the bus master to clear any errors currently registered within the bus master for the specified slot. Any error conditions functions as normal within the controller and slot card. 0 = Allows all errors from the specified slot card to pass to the bus master. Any errors generated within the slot card while this disable bit is set will not pass to the bus master. Only new errors will pass to the bus master.
Start Balance	1 = Start a balance cycle. The 0 to 1 transition causes the actual balance cycle. 0 = No operation.
Start Continuous (AEMS, ExactDress)	 1 = Start continuous plotting and transmission of acoustical data. The 0 to 1 transition causes the actual start. 0 = No operation. For AEMS, the function of this output is valid only when Learn Mode = 0.
Start Learn	 1 = Start the AE learn cycle. The 0 to 1 transition causes the action. 0 = No operation. The function of this output is valid only when Learn Mode = 1.
Start-Stop Process (ExactDress)	 1 = Start process monitoring or data teach acquisition, per status of Data Teach. The 0 to1 transition causes the actual start. 0 = Stop process monitoring or data teach acquisition. The 1 to 0 transition causes the actual stop.
Stop (AEMS, ExactDress)	 1 = Stop plotting and transmission of acoustical data. The 0 to 1 transition causes the actual stop. 0 = No operation. For AEMS, the function of this output is valid only when Learn Mode = 0.
Stop Balance	 1 = Abort a balance cycle in progress. The 0 to 1 transition causes the actual abort. 0 = No operation.

Table 6: Inputs from SB-5500

Input Parameter	Definition
Channel x fluid sensor attached (x = $1-2$)	1 = Fluid sensor attached to this sensor. 0 = Fluid sensor is not attached to this sensor or the job is not executing.
Balance in Progress	When this bit is set, an automatic balance cycle is in progress.
Balance Out of Tolerance	This bit becomes 1 when the sensed vibration level exceeds the operator- defined Tolerance level. The CNC BOT MODE setting determines the function of this bit during an automatic balance cycle.
Balance Out of Tolerance2	The bit become 1 when the sensed vibration level exceeds the operator- defined Critical Tolerance or when the spindle RPM exceeds the operator- defined Critical RPM. The CNC BOT MODE setting determines the function of this bit during an automatic balance cycle.
Balancing Direction (Hydro only)	0,0 = Automatic always 0,1 = Automatic once 1,0 = Same 1,1 = Opposite
Channel x Digital Outputs 1-14 (x = 1-4)	1 = The indicated digital output is active. 0 = The indicated digital output is inactive.
Channel x Executing Job $(x = 1-4)$	0 = No job executing on this channel. Else, the job number of the job that is executing.
Channel x Infeed Enable $(x = 1-4)$	1 = The channel is running a job. (OK to run the job cycle). 0 = The channel is not running a job. There may be an error.
Channel x Param Changed $(x = 1-4)$	1 = A job parameter changed while the current job is running. The job needs to restart to use the updated parameters.
Channel x Teach $(x = 1-4)$	1 = The channel is operating in Teach mode.0 = The channel is not operating in Teach mode.
Crash	This bit is 1 when the actual acoustical energy level is above the operator- defined Crash value for the current job.
Cycle Running	This bit is 1 when the system is graphing and transmitting acoustical energy.
Data Teach	1 = Data Teach mode is active. 0 = Process monitoring mode active.
Dataset #	Current job number.
Dual Balancing Mode	0 = Single 1 = Dual
Dual Balancing Type	0,0 = Single 0,1 = Dual plane 1,0 = Dual spindle (not supported)
Error Needs to be Cleared	When this bit is set, an error has occurred and needs to be serviced or cleared. Clear it by setting the " <u>Clear the Error</u> " bit in Outputs to SB-5500.
Errors (A-X)	These bits indicate individual errors. To match error bits to the error description, the operation guide for that card.

Input Parameter	Definition
Failed Balance/System Inoperative	This bit is 1 when an automatic balance cycle fails or the system is inoperative because of an error condition.
Fluid Sensor	1 = Fluid sensor attached to this sensor. 0 = Fluid sensor is not attached to this sensor or the job is not executing.
Front Panel Inhibited (Main)	 1 = Front panel is inhibited for all slots. 0 = Front panel active for all slots. Note: Individual slot front panel inhibits may still be active.
Front Panel Inhibited (Slot Cards)	This bit indicates the current setting of the CNC-interface FPI bit. When this bit is set, key operator actions at the front panel are disallowed. Disables the Menu , Man. , and Auto buttons. The Power and Cancel buttons are enabled still. Use them to stop an automatic balance operation. Allows access to the Show-All button and System Status screen.
Front Panel Installed	1 = Front panel assembly is connected to SB5500 controller. 0 = No front panel assembly connected.
Gap	This bit is 1 when the actual acoustical energy level is above the operator- defined Gap value for the current job.
Job # (AEMS)	The current job number. 0 = Off 1-16 = Job number 1 to 16. (1 through 32 in 32-job mode.)
Job # (Balancer)	The current job number. 0 = Off 1-16 = Job number 1 to 16.
Job 32 Mode	1 = 32-job mode. Valid jobs are 1-32. M1 and M2 do not select the mode. 0 = 16-job mode. Valid jobs are 1-16. M1 and M2 select the alternates.
Learn Saved	 1 = New parameters were saved as a result of the Learn cycle while "Error! <u>Reference source not found.</u>" mode and "Enable Learn Saved" are set (condition). 0 = Parameters not saved during Learn, or "Enable Learn Saved" or "Error! <u>Reference source not found.</u>" were cleared.
Limit 1	This bit is 1 when the actual acoustical energy level is above the operator- defined Limit 1 value for the current job.
Limit 2	This bit is 1 when the actual acoustical energy level is above the operator- defined Limit 2 value for the current job.
M1	This bit is 1 when the Monitoring parameter set 1 is the current setting.
M2	This bit is 1 when the Monitoring parameter set 2 is the current setting.
Max	 1 = Error: The AE signal exceeds the level of the Process Maximum Limit setting (excessive dress pressure). 0 = No error.
Min	1 = Error: The results of the current dress process fall below the zone minimum limit set. Indicates that some active process zones have produced AE signal levels that are lower than the corresponding zone dataset master. 0 = No error.

Input Parameter	Definition
Not Idle Mode	 1 = Not Idle. In this state, the Profibus interface cannot initiate some functions. See output bit "Force Idle Mode." 0 = Idle. Profibus can initiate functions.
Pressure Level Hi (H) and Low (L)	The actual acoustical energy level in units on 0.01 dynes. The 2 bytes that make up this field are in big-endian format. Compute the total 16-bit value as 256*label-Hi + label-Low. (Hi stands for high.)
Process running	1 = The process is running. 0 = The process has stopped.
RPM Hi (H) and Low (L)	The actual RPM. The 2 bytes that make up this field are in big-endian format. Compute the total 16-bit value as 256*label-Hi + label-Low. (Hi stands for high.)
Sensor #	The currently monitored sensor.
Slot x Error Disable (x=1,2,3 or 4)	 1 = Prevent any errors from the specified slot from passing to the bus master. 1 = Slot x errors are disabled. 0 = Slot x errors are enabled. Send a Diagnosis Clear message to the bus master to clear any errors currently registered in the bus master for the specified slot. Any error conditions continue to function as normal within the controller and slot card. 0 = Allows all errors from the specified slot card to pass to the bus master. Any errors generated within the slot card while this disable bit is set will not pass to the bus master.
Vibration Amplitude Hi (H) and Low (L)	The actual vibration amplitude in units on 0.01 microns. The 2 bytes that make up this field are in big-endian format. Compute the total 16-bit value as 256*label-Hi + label-Low. (Hi stands for high.)
Vibration phase Hi (H) and Low (L)	The actual vibration phase in units on 0.1 degrees. The 2 bytes that make up this field are in big-endian format. Compute the total 16-bit value as 256*label-Hi + label-Low. (Hi stands for high.)
Zero Offset Value Hi (H) and Low (L)	The actual acoustical energy level in units on 0.01 dynes. The 2 bytes that make up this field are in big-endian format. Compute the total 16-bit value as 256*label-Hi + label-Low. (Hi stands for high.)

SBS Error Reporting

The SBS card module reported errors use letter codes A through L. **Internal Voltage Error** (no letter code) is an error that originates from the Main module and indicates an internal power form failure in the control. The system always reports this error to the diagnosis field. For more information about each error code, see the operation manual.

Error Reporting Options: Diagnosis Field or Data Field

Each card configuration module introduced prior to GSD revision 3.0 will place the errors into the Diagnosis Fields. Starting with GSD revision 3.0, selection of a newer modules for the card will places errors into the Data Fields instead. The first of these newer modules have **wo diag** as a suffix for its name. Cards introduced after GSD revision 3 only place errors in the Data Fields.

Network Scan GSD

Selection of configuration modules can be performed manually, but the master can also choose the modules automatically using Network Scan. For Network Scan, the SB-5500 sends a GSD Scan Number to the master. The Scan Number sets the highest GSD level to be used for any module in the GSD file. The Scan Number can be in a range defined by the installed cards. The minimum is the largest introductory GSD level of all **cards** installed. The maximum is the largest introductory level of all **modules** of cards installed.

The **Network Scan GSD** setting is found on the Profibus Setup screen on the Front Panel or on the Change IP tab of IVIS. Edit it to set the maximum GSD level module to be chosen for the cards. Factory default is the smallest of the range of values. With Profinet, the highest value will be used and cannot be edited.

For example, a control has two cards with modules at introductory GSD levels of (1, 3, and 5) and (2 and 3) respectively. The largest of (1 and 2) is 2. The largest of (5 and 3) is 5. Therefore, the range of Scan Numbers can be from 2 to 5. Factory default is the smallest, 2. If 2 is entered, then the Network Scan will choose modules introduced at GSD levels of (1) and (2). If 3 or 4 is entered, then the Network Scan will choose modules introduced at GSD levels of (3) and (3). If 5 is entered, then the Network Scan will choose modules introduced at GSD levels of (5) and (3).

Firmware update

When manually configuring the master, if a device card's firmware is not current enough to support a newer GSD level (e.g. "wo Diag" with old firmware), then the configuration will fail when the master attempts to verify the configuration selections with the SB-5500. To resolve this issue, go to <u>https://accretechsbs.com/</u> to get the latest firmware and follow instructions in the zip file.

Report errors

As soon as the master initiates the Profibus interface, then a module of GSD level 1 or 2 can send errors as Diagnosis Data. After the master sends the first output packet, then its **Slot X Error Disable** control bits control whether the Diagnosis Data can be sent to the master (see "<u>Parameters</u>").

The **Report Errors** setting is found on the Profibus Setup screen on the Front Panel or on the Change IP tab of IVIS. Edit it to control the cards ability to send Diagnosis Data before the master sends the first output packet. **Yes** allow the cards to send Diagnosis Data prior to the master's first output packet. **No** prevents the Diagnosis Data prior to the first output packet.

Application Notes

Profibus Byte and Word Addresses for the Siemens S7 and SB-5500

The SB-5500 Profibus packets contain both byte (8-bit size) and word (16-bit size) variables and data. The position and number of data elements varies depending on what function cards are plugged in. This means that the word variables may be on odd memory addresses or on even memory addresses. This may be a problem for some Profibus controllers.

The 16-bit values are in big-endian format, meaning that the high order byte is the first byte in the list. SBS has labeled the 16-bit values as two-byte values with the first byte suffix of high (H or Hi) and the second byte suffix of low (L or Low). If a 16-bit value cannot be directly accessed on the odd or even boundary, then the 16-bit value can be calculated as: $LABEL_Low + (256 times LABEL_Hi)$.

Profibus and LCD Interaction

Usually, the user controlling the SB-5500 over Profibus looks at the results from the changes with Profibus, not on the LCD. Commands and parameters that the system sends over Profibus and that change settings in

the SB-5500 do not cause the LCD screen to change. For the screen to reflect the change, the user must change to another screen and then return to the previous screen. After doing this, the Profibus changes are visible.

Profibus Master Reporting Errors A and J While the Spindle is Stopped

Interpretation of SBS error codes A and J are both timing and RPM dependent. The SB-5500 reports these errors any time the RPM signal is not present (error J), or when the RPM signal is present but is either below 300 RPM or above 30,000 RPM (error A). SB-55500 does not know whether the lack of RPM is intended and valid (stopped spindle), so it always reports the status of RPM using these error codes. The Profibus master or PLC must interpret these errors since they can determine whether the spindle is rotating.

Errors Sent by Diagnosis Messages

If a Sinumerik system has **Safety Integrated Features** or **SF** running, this causes the CNC to go into **Stop** mode and display **SF** when it sees SBS error signals. The feature is active by default in later versions of Siemens code.

To prevent the Siemens PLC from going into **Stop** mode and displaying **SF** when SBS sends a diagnosis message by Profibus, do one of the following:

- 1. Use GSD file version 3.0 or later, and then select module types with the **wo diag** option, which removes SBS error reporting from the diagnosis field and instead sends errors as part of the regular data packet.
- 2. Use the **Report Errors** setting on the Profibus Setup screen to prevent SB-5500 from sending errors from power on of the SBS control until the master sends the first output packet. For more information, see "SBS Error Reporting."
- 3. (Not Recommended) Disable the Sinumerik **Safety Integrated Features** or **SF** by changing the **OB82** setting on the Sinumerik control as follows.
 - a. OB82 Version 1.0 Set EXTERNAL_DP_INTERFACE:= FALSE

LAD/STL/FBD - [0882 "0B_DIAGNOSTIC_INT" 525280\SINUMERIK\PLC 317-2DP\\0882]						
File Edit Insert PLC Debug View	Options Window Help					
D 📽 🔓 📓 🍯 👗 🛍 🛍 🗠 🗠	🛛 🖓 🏙 🔽 🖓 📲 😚 🖓 !« »!	🗖 🖪 🎬 籠 井 ᆉ ‐() 🕾 ၊ ユ ≻(🕅				
New network SFB blocks SFB blocks SFB blocks SFB blocks SFB blocks SFC blocks Multiple instances	□ Interface ⊕ - Interface	Contents Of: 'Environment\Interface' Name TEMP				
n - <mark>.</mark> Libraries	OB82 : Title: Comment:					
	Title:					
	CALL "FB_DP_D DP_MASTERSYST EXTERNAL_DP_I MANUAL_MODE SINGLE_STEP_S SINGLE_STEP_E RESET SINGLE_DIAG	<pre>IAG_INTEGR", "DB_DP_DIAG_INTEGR" EM :=1 NTERFACE:=FALSE := LAVE := RROR := :="FK_NC_Reset" :=</pre>				

🗮 LAD/STL/FBD - [OB82 "OB_DIAGNOS"	TIC_INT" SGP320\SINUMERIK\CPU	317F-3 PN/DP\\OB82]
File Edit Insert PLC Debug Vie	w Options Window Help	
🗅 😂 🔓 🖶 🎒 👗 🛍 🛍 🗠	은 6월 🏜 🔁 📲 64 ! « »!	<mark>□</mark> ⊑ ≌ ≌ ≧ H H O 앱 L → ⊣ №
		Contents Of: 'Environment\Interface'
	- Interface	Name
New network	TEMP	TEMP
E FB blocks		2
FC blocks		
E SFB blocks		
Multiple instances		
Elbraries		
	OB82 : "I/O Point Fa	ult"
	Comment:	
	Detwork 1: Detailed	d Diagnosis in OB82 (interrupt)
	CALL "GP_DIAG	
	PlcStop:=FALSE	//TRUE

b. OB82 Version 1.0 Set PlcStop:=FALSE

Profinet

Profinet Configuration

Accretech SBS, Inc. controllers incorporate a device to make the conversion from Profinet to Profibus. They are designed to have a variety of slot cards installed. There is not a generic GSDML file that can be used to associate the machine tool's Profinet interface with an unspecified selection of slot cards. The slot card configuration for a SBS controller requires the generation of a corresponding Profinet GSDML file. The following procedure uses the SBS controller with its slot cards and the SBS Profibus GSD file to produce a GSDML file for its slot card configuration. The resulting GSDML file is used to associate the machine tool's Profinet interface with that SBS controller.

The following information is specific to Accretech SBS, Inc. customers. For more information about installing Hilscher netLINK, see the <u>netLINK NL 51N-DPL Installation and Hardware Description User</u> Manual. For more information about configuring netLINK, see the <u>netTAP</u>, <u>netBRICK and netLINK</u> <u>Configuration of Gateway and Proxy Devices Operating Instruction Manual</u>. For more information about netLINK proxies, see the <u>netLINK PROXY Podcast - Commissioning</u> and <u>netLINK PROXY Podcast - Multiple Proxies in single PROFINET segment</u> videos.

Install Configuration Software

The SBS Profinet device uses Gateway Solutions software needed for configuring Profinet.

- 1. Go to www.hilscher.com/support/downloads.
- 2. Click Gateway Solutions DVD.
- 3. Select Save to download the file.
- 4. Navigate to the default **Download** folder.
- 5. Extract the contents of the Zip file to a folder named Gateway Solutions DVD.
- 6. From the Gateway Solutions DVD folder, double-click Gateway_Solutions.exe.



Figure 5: Gateway Solutions Icon

7. From the Gateway Solutions Startup window, click **Install Configuration and Diagnostic Software**.



Figure 6: Gateway Solutions Startup Window

- 8. If a User Account Control message appears, click Yes.
- 9. From the Gateway Solutions install options, do the following:
 - a. Select Configuration Software SYCON.net.
 - b. Click Execute.



Figure 7: Gateway Solutions Install Options

Ethernet Device Setup

After attaching the ethernet cable to SBS and PLC, run the Ethernet Device Setup program.

- 1. From the Start menu, navigate to Ethernet Device Setup in the SYCON.net System Configurator folder.
- 2. Double-click Ethernet Device Setup.

Auslogics Broadcom CMake	^		
Cygwin Foxit Reader 5.1		Administrators	
Java Git		Documents •	
Maintenance Microsoft Expression		Pictures	
Microsoft Silverlight NETGEAR		Music	
Python 2.7		Downloads 🕨	
 Qt Realterm Siemens Automation 		Computer •	
J Skype	Π	Control Panel	
SYCON.net System Configurator		Devices and Printers	
F Ethernet Device Setup SYCON.net		Default Programs	
Visual Studio 2015 Visual Studio 2017	-	Administrative Tools 🕨	
1 Back	-	Help and Support	
Search programs and files		Shut down	

Figure 8: Ethernet Device Setup in Start Menu

3. From the Ethernet Device Configuration window, click Search Devices.

<u>D</u> evices Online	Find:				next	previo	ius :
MAC Address	Device	Device Name	IP Address	Protocol	Devic	Vend	D.

Figure 9: Search Devices from Ethernet Device Configuration Window

evices Online	Find:			<u> </u>	<u>n</u> ext	previo	us
MAC Address	Device	Device Name	IP Address	Protocol	Devic	Vend	Device role
0-02-A2-48-D5-08 10-D0-C9-F6-B0-8C 10-18-18-6A-87-C9	NL51NDPL adam-6 S7-300	adam-6100pn plcxb1d0ed	0.0.0.0 10.1.40.5 10.1.30.1	DCP DCP DCP	0x0110 0x6100 0x0101	0x011E 0x01C6 0x002A	Device Device Controller

Figure 10: After Searching Devices, the Devices Online Appear

Set IP Address

- 1. From the Ethernet Device Configuration window, select the row with Device Type NL51NDPL.
- 2. Right-click the row to view the options.
- 3. Select Set IP Address.

evices Online	Find:				<u>ext</u>	previo	us
MAC Address	Device	Device Name	IP Address	Protocol	Devic	Vend	Device role
00-02-A2-48-D5-08 00-D0-C9-F6-80-8C	NL51NDPL adam-6	- not set - adam-6100pn	0.0.0.0	Signal			
00-18-18-6A-87-C9	57-300	picxb 1d0ed	10.1.30.1	Set IP A	ddress		er
				Set Devi	ce Name.		
				Reset to	factory d	efaults	

Figure 11: Select Set IP Address

- 4. From the IP Configuration window, do the following:
 - a. Set the **IP address**.
 - b. Set the **Subnet mask** for the network.
 - c. Click OK.

IP address:	10	4	1	24	20	÷	5
Subnet <u>m</u> ask:	255	•	0		0	10	0
Default gateway:	0	e	0		0	•	0
C Get IP Address via <u>D</u> HCP							
Authentication method:	Client	ID					
<u>C</u> lient ID:							
Store settings temporary							

Figure 12: IP Configuration Window

Set SYCON Password

Set an administrator password the first time SYCON.net starts.

- 1. From the Start menu, navigate to SYCON.net in the SYCON.net System Configurator folder.
- 2. Double-click **SYCON.net**. (For more information see Figure 8.)
- 3. From the SYCON.net User Login window, do the following:
 - a. In **Password**, type a password for the **Administrator**.
 - b. In **Confirm password**, repeat the same password.
 - c. Click OK.



Figure 13: SYCON.net User Login

Import Device Description

- 1. From the SYCON.net window, select the Network menu.
- 2. From the Network menu, select Import Device Descriptions.



Figure 14: Import Device Descriptions Option on the Network Menu

- 3. From the Import Device Description window, do the following:
 - a. Navigate to the GSD file.
 - b. Select the **GSD** file.
 - c. Click Open.



Figure 15: Import Device Description Window

Add NetLINK

- 1. From the SYCON.net window, click the Vendor tab.
- 2. From the Vendor tab, select the Hilscher GmbH folder and then the Gateway / Stand-Alone Slave folder.
- 3. From the Gateway / Stand-Alone Slave folder, scroll to NL 51N-DPL.
- 4. Select NL 51N-DPL.

SYCON.net - [Untitled.spj]				
Eile View Device Network Extras Help				
0 🖉 🖬 🕲 📑 🖆 🖄 🏂 📾 📑 5	2 5, 5,			
netProject ×	netDevice		_ ×	
Project: Untitled	x	VI S1X-RE/PLS VI S1X-		
		11	1	×
Ready			Administrator	NUM //

Figure 16: Select NetLINK from SYCON.net

5. Drag NL 51N-DPL to the Network View pane.

SYCON.net-[Untitled.sp] Elle View Device Network Extras Help		
	NUSIX-RE/PLS N	
د ۲		
t d b b SYCOL.net / netDevice /	4	٩
Ready	Administr	ator NUM

Figure 17: Drag NetLINK to Network View

- 6. Right-click the **netLINK** object.
- 7. Select Configuration.
- 8. Select Proxy.

SYCON.net - [Untitled.spj]						
File View Device Network Extras Help						
🗋 🗅 🚅 🖳 🔍 📑 🖼 🕉 🌚 📑	52 53 54					
netProject	× netDevice				* X	
neuropat ▲		LINK[NL 51N-DPL]<>(#1)	Proxy PROFINET IO Device PROFIBUS-DP Master	Image: State of the	DNSEDS)	
SYCON.net / netDevice /				4		•
neauy					Administrator	NUM

Figure 18: Select Configuration and then Proxy

Search for SYCON IP Address

- 1. From the netDevice Proxy netLINK window, navigate to **netXDriver** on the **Navigation area** pane.
- 2. Select netXDriver.
- 3. From the **netX Driver** pane, select the **TCP Connection** tab.
- 4. Verify that the settings match the settings in Figure 19.
- If not, do the following. (For more information about the settings, see the Settings section of the netTAP, netBRICK and netLINK Configuration of Gateway and Proxy Devices Operating Instruction Manual.)
 - a. Select Use IP Range.
 - b. Set the **IP Address** range between **10.1.20.1 10.1.20.10**.
 - c. Set the TCP Port to 50111.
 - d. Click Save.

PretDevice - Proxy netLINK[N IO Device: NL 51 Vendor: Hilsch	L 51N-DPL]<>(#1) N-DPL er GmbH	Device ID: Vendor ID:	- 0x011E
Navigation area	net	X Driver	
 Settings Driver RetX Driver Device Assignment Configuration Settings 	USB/RS232 Connection TCP Connection	: 100 ★ ms Address Count 10 .t: 2000 ★ ms	
		Restore	Save Save All
		ОК	ancel Apply Help

Figure 19: Search for SYCON IP Address

- 6. From the Navigation area pane, select Device Assignment.
- 7. From the **Device Assignment** pane, select **NL 51N-DPL**.
- 8. Click OK.

Vendor: Hilso	her GmbH					Ven	dor ID: 0x011E	
lavigation area 📃					Device A	ssignment		
Settings	Scan progress	s: 23/23 Devic	es (Current device: -)					Scan
Device Assignment	Device selecti	ion: su	itable only 💌					
Configuration	Device	e H	ardware Ports 0/1/	Slot nu	Serial nu	Driver	Channel Protocol	Access path
	Access gath: {854C8CC7-F333-4135-8405-6E12FC88EE62}\10.1.20.5:50111\dfX0_Ch2							

Figure 20: Select SYCON Device

Network Scan

- 1. Right-click the **netLINK** object.
- 2. Select Network Scan.

SYCON.net - [Unitid spi] File View Dexice Network Extras Help File File	netLBHQNL 51N-DPL]<>(#1) Connect Download Upload Cut Copy Paste Network Scan Configuration Nasured Value Simulation Diagnosis Additional Functions Delete Symbolic Name	A MI SIX-RE/PLS A MI SIX-RE/PLS A MI SIX-RE/PLS A MI JOOX-RE JSS FRUCKG A MI JOOX-RE/MS A MI JOOX-RE	
× v v v v v v v v v v v v v	Symbolic Name		Administrator NUM

Figure 21: SYCON Network Scan Option

- 3. From the Scan Response of Device window, verify that SB5500, SB5575, or SB5580 appears in the **DTM Device** column.
- 4. Click Create Devices.

Station Add	Device Type ID	Sub Device Type	DTM to Use	Device Class	DTM Device	Quality	Action
3	3197 (0x00000c7d)	n/a	Hilscher generic [) Not Specified SB	5500	[3] Generic for	Add
	-		Information of h	nardware device	Infor	mation from DTM	
Device			Information of H	nardware device	SB5500	mation from DTM	
Device DTM Progld		-	Information of H	nardware device	SB5500 GSDDTM.DTMD	mation from DTM	
Device DTM Progld Station Address Vendor	58	3 (/or	Information of H	nardware device	SB5500 GSDDTM.DTMD - Schmitt Industries	mation from DTM ev.1	
Device DTM Progld Station Addres Vendor Device Type I			Information of H	nardware device	SB5500 GSDDTM.DTMD - Schmitt Industries 3137 (No0000-7	mation from DTM ev.1 i, Inc	
Device DTM Progld Station Addres Vendor Device Type I Sub Device T	ss D		Information of H 00000000) (0x00000c 7d)	nardware device	SB5500 GSDDTM.DTMD - Schmitt Industries 3197 (0x00000c7	mation from DTM ev.1 ;, Inc d)	

Figure 22: Scan Profibus

YCON.net - [Untitled.spj]		
<u>Eile ⊻iew Ex</u> tras <u>H</u> elp		
🗅 🚅 🔒 🖓 걸 걸 🌚 🏂 🌚 📑 🤧		
netProject *	netDevice	× ×
🖃 🧰 Project: Untitled		
	Image:	Image: Strategy of the strategy
	1	
кеаду		Administrator

Figure 23: Profibus Added

SYCON Download

- 1. From the **netDevice** pane, right-click the **netLINK** object.
- 2. Select Download.

F SYCON.net - [Untitled.spj]			
File View Device Network Extras Help			
D 📽 🖬 🕼 📑 🏽 🕤 🕉 🚳 📑 📑 📑 📑			
netProject A × netDevice			* ×
- Project: Untitled		^ [
	Connect Disconnect Download Upload Cut Copy Paste Network Scan Configuration Messured Value Simulation Diagnosis Additional Functions Delete	NI SOXX RE/CS VO.1 NI SIX-RE/EIS NI SIX-RE/VIS NI SIX-RE/VIS NI SIX-RE/VIS NI SIX-RE/VIS NI SIX-RE/VIS NISX-RE/VIS	, , d/
O I A A P PI SYCON.net A netDevice		•	<u> </u>
Ready		Administrator	NUM //

Figure 24: SYCON Download

3. When the following Download message appears, click Yes.

"If you attempt to download during bus operation, communication between master and slaves is stopped. Do you really want to download?"

4. Wait until the Reset Device. Please wait! message disappears.

Export GSDML

- 1. From the **netDevice** pane, right-click the **netLINK** object.
- 2. Select Additional Functions.
- 3. Select **PROFINET IO Device**.
- 4. Select Export GSDML.



Figure 25: Export GSDML

- 5. From the Save As window, do the following:
 - a. Navigate to a **Save in** location.
 - b. Click Save.

Save Project and Disconnect

- 1. From the File menu, select Save As.
- 2. From the Save As window, type a name for the project in File name.
- 3. Click Save.

- 4. If the objects in the **netDevice** pane are highlighted after the system finishes saving the project, rightclick **netLINK**.
- 5. Select Disconnect.
- 6. Close the SYCON program.



Figure 26: SYCON Disconnect

The GSDML file is generated, and the SBS controller is configured. The GSDML file has the same bytes as the "Parameters" tables. Use the file and the configuration to connect the Profinet interface of the machine tool to the SBS controller. If the slot card configuration changes, repeat this procedure.

Profinet has the capability in its GSDML file to identify the individual bytes and bits by name. Some machine controls may support the byte names and some support the bit names. With further processing, GSDML files with byte or bit definitions can be generated.

Ordering and System Maintenance

Ordering Profibus and Profinet

Selection of your Profibus or Profinet system requires only a few moments of your time:

- 1. Complete the application questionnaire provided by your SBS Balance Systems dealer.
- 2. Based upon response to the questionnaire, your dealer selects the appropriate mounting adapter and determines the mass compensation required by your application.
- 3. Your system is delivered and matched to your exact needs. The system comes with complete operating instructions, which makes operator training and system use simple and which helps to bring an immediate return on your investment.

Support

For support, contact the machine builder or SBS at:

Accretech SBS, Inc. 2451 NW 28th Avenue Portland, Oregon 97210 USA

Tel.: +1 503.227.7908 Fax: +1 503.223.1258 <u>TechSupport@accretechSBS.com</u> <u>https://accretechsbs.com/</u>

Return and Repair Policy

Accretech SBS, Inc. policy is to give highest priority to the service needs of our customers. We recognize the cost of machine downtime, and we strive to deliver same day repair of items arriving by overnight delivery at our facility. Because of the complication and delays involved with international shipments, customers outside the continental U.S. should contact their local SBS Balance System source for service support. Before returning any equipment for repair, you must contact Accretech SBS, Inc. for a Return Materials Authorization (RMA) number. Without this tracking number, Accretech SBS, Inc. cannot ensure prompt and accurate completion of your repair needs. Failure to obtain an RMA number may result in substantial delay.